


# Specifications for Twin Tube Short Wave Emitter

# DTG 400V 6200W 1065 KrH1

IC-1758

Date: 13-12-19

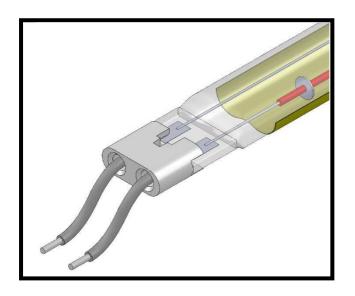

#### **CUSTOMER AGREEMENT**

Section	Engineering	Quality		
Date	13-12-19	13-12-19		
	DEMANGEON Olivier	DIDIER Benoit		
Signature	Quadro			

Page: 1/5



#### Caution

- Use infrared heater lamp(s) with approved appliances with safety structure as well as safety devices.
- Avoid over voltage situation (cause of short lifetime and fire).
- Do not place an operating infrared heater lamp(s) close to flammable materials (cause of fire).
- Ensure the power supply is disconnected before accessing the infrared heater lamp(s) in alliances (caused of electric shock).
- Do not drop, hit, and stress infrared heater(s) and its wire-harnesses mounted with excessive force or vibration, and do not scratch infrared heater lamp glasses (cause of injure, breakage and short-circuit).
- In case of an infrared heater lamp(s) being broken, do not handle scattered glass fragments with bare hand (cause of injure).
- Do not use the infrared heater lamp(s) which is not explosion-proof product(s) under flammable gas or organic solvent environment (cause of explosion, ignition and fire).

#### Attention

- Infrared heater lamp(s) becomes extraordinarily hot to emit strong infrared radiations around their environment during operation. Ensure safety before the start of the operation.
- Operate the infrared heater lamp(s) inside the nominal voltage and maximum wattage density instructed (cause of short lifetime).
- Follow the infrared heater lamp(s) burning orientation strictly in its specifications (cause of short lifetime and fire).
- Never touch infrared heater lamp(s) in operation or even just after being operated (cause of skin burn).
- Do not use infrared heater lamp(s) under water, high humidity or corrosive environment (cause of short lifetime).
- Do not gaze an operating infrared heater(s) (cause of eye damage).

- In order to keep the quartz tube in good condition, do not handle infrared heater lamp(s) tube with bare hands. Use clean cloth impregnated with ethyl alcohol to wipe spot gently, if necessary (cause of short lifetime).
- Infrared heater lamp(s) shall be fixed and retained firmly inside appliances (cause of drop and breakage).
- Do not exceed permissible temperature of the wire-harnesses mounted on infrared heater lamp(s).
- Used infrared heater lamp(s) shall be disposed as an industrial waste on the user's responsibility.

#### Notice

- Consult when infrared heater lamp(s) is to be used in vacuum environment.
- Consult when infrared heater lamp(s) is to be operated at more than the recommended voltage in the article 3 (Operating infrared heater lamp(s) at a higher than nominal voltage causes a blackening on inner wall of glass tube by excess tungsten vapor. Paradoxically however operating lamp at a lower voltage leads to insufficient temperature of optimum value for the filament, and excess gas may damage the filament. Such operations may therefore result to shorten lamp life).
- Although there is some case to enable to observe a browning on the both end of infrared heater lamp (s) after use, this phenomena does not influence the performance of infrared heater lamp(s).
- The approval from the customer for the specifications, cautions, attentions and notices for the infrared heater lamp shall be completed in the date of the customer's signature in the front page or the issued date of order sheet from the customer whichever occurs first.



#### Operating condition

- 1-1. Temperature at **sealing part**: Temperature at both sealing ends (in the quartz glass above the molybdenum foil center) shall be measured with thermo-couple and **must not exceed 350°C** (to avoid a loss of electrical conductivity caused by molybdenum foil oxidation)
- 1-2. Temperature at glass tube surface: 250 to 900°C
- 1-3. Gold reflector surface temperature should not exceed  $450 \sim 500^{\circ}$ C.
- 1-4. Operating atmosphere: Under normal atmosphere pressure, without corrosive or explosive or inflammable gas.
- 2. Storage environment
  - 2-1. Temperature range: -20°C MIN. 70°C MAX.
  - 2-2. Humidity range: 10%RH MIN 90%RHMAX without condensation.
  - 2-3. Under normal atmosphere pressure, without corrosive gas.

#### Warrantee

- 3-1. Warrantee period: One year after the invoiced date to the customer.
- 3-2. Condition of warrantee: In case of infrared heater lamp(s) with defect (defined as none-conformity to the specifications) is returned from the customer, during the warrantee period, **DIRTECH S.A.S.** will compensate with re-delivering good infrared heater lamp(s). There is no obligation if the problem happened due to miss-design of appliances including safety design, miss-usage or miss handling of the infrared heater lamp(s). In case doubts rise up to judge none-conformity to the specifications, both parties shall corporate together to solve problems.


#### Batch code information:

#### Batch code example

A 0 6

Month Code Jan Α В Feb С Mar D Apr Ε May G June July Н Aug K L Sept Oct R S Nov Dec U

Year	Code		
2006	06		
2007	07		
2008	08		
2009	09		
2010	10		
2011	11		
2012	12		
2013	13		
2014	14		
2015	15		
2016	16		
Etc			

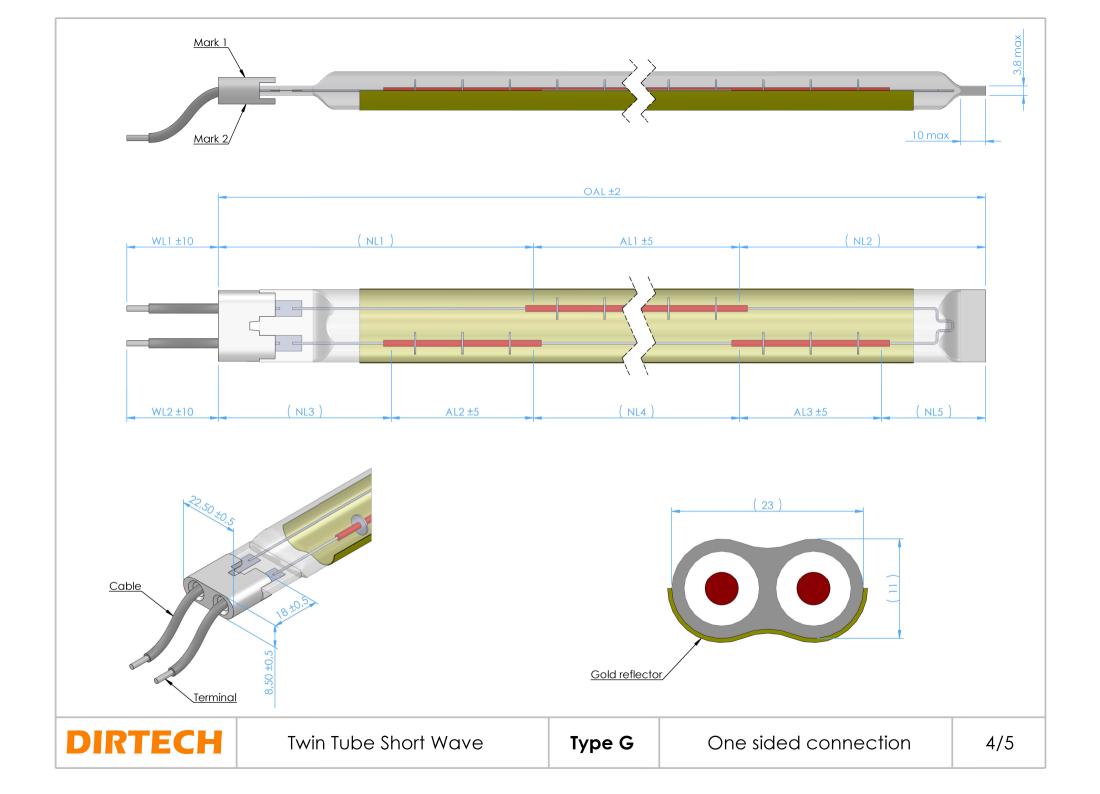



# **TECHNICAL DATA**

### 1°- Electrical data:

Nominal voltage	Wattage	Average life time* Lighting position**		Tc	
400 V	6200 W ± 5%	5 000 Hrs	Horizontal ± 4°	2300 K	
	(5200W + 2 X 500W)				

• \* with AC power supply, 50 or 60 Hz, continuously at room temperature and free from vibration.

# 2°- Dimensional data:

OAL	AL1	NL1	NL2		
	1060 ± 5 mm	(60 mm)	(40 mm)		
1160 ± 2 mm	AL2 & AL3	NL3	NL4	NL5	
	100 ± 5 mm	(60 mm)	(860 mm)	(40 mm)	

#### 3°- Cable data:

Terminal	WL 1 & WL 2
End stripped	100 ± 10 mm

## 4°- Marking:

Mark 1	Mark 2		
DIRTECH	DTG400V6200W		
+lot	1065KrH1		

Twin Tube Short Wave Emitter			Modif.			
			Date:			
DTG 400V 6200W 1065 KrH1			Comments			
Date: 13-12-19	<b>DIRTECH®</b>	Drawing number IC-1758	Comr			